




# PowerBox Systems®

World Leaders in RC  
Power Supply Systems

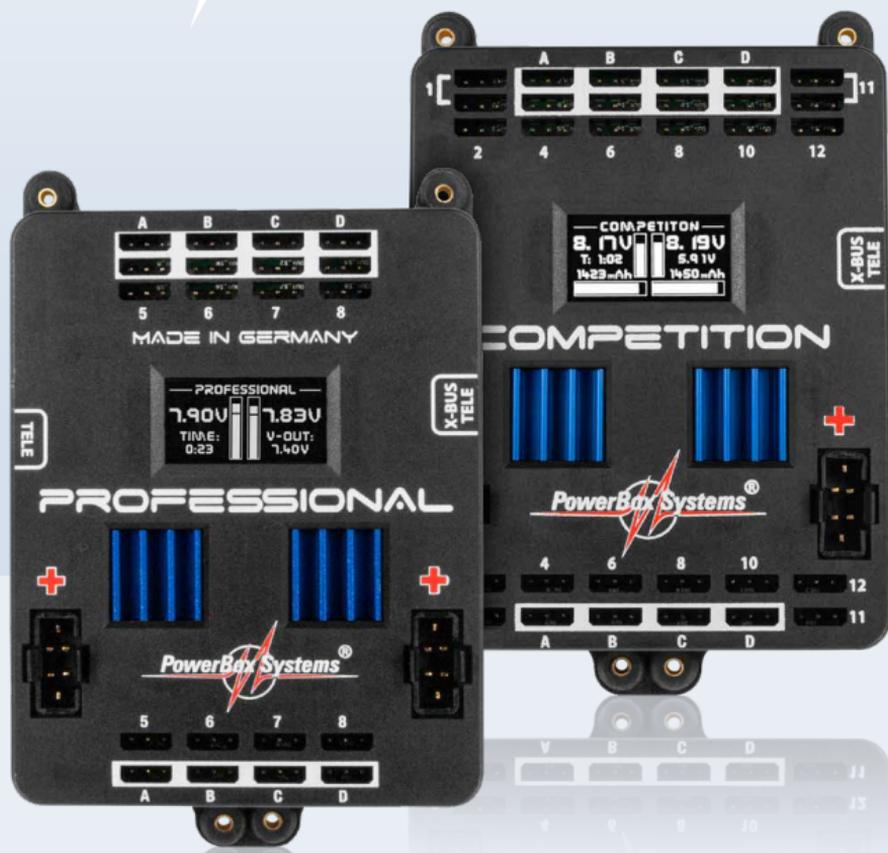

POWERBOX COCKPIT  
POWERBOX COMPETITION  
POWERBOX PROFESSIONAL

**Dear customer,**

We are delighted that you have decided to purchase a power supply unit from **PowerBox-Systems**.

We hope you have many hours of pleasure and great success with your new **PowerBox**.

## **1. PRODUCT DESCRIPTION**

The **PowerBox Competition, Cockpit** and **Professional** have undergone constant development since their introduction in 2009. For example, the menu system has been improved, and new functions such as telemetry and the door sequencer assistant have been added.

These **PowerBoxes** are modern power supply systems which contain all the electronic components required for modern receivers, servos and models. All the essential components for a secure power supply voltage – ICs, micro-controllers and electronic circuits – are **duplicated**.



The outstanding features of this High-End power supply unit are a raft of the latest innovations such as an integral high-resolution graphic OLED screen, door sequencer capable of multitasking with Setup Assistant, four match-channels and the facility to bind to the downlink channels of various RC system manufacturers.

## FEATURES:


- + Integral high-resolution graphic OLED screen with 128 x 64 pixels
- + Particularly user-friendly menu-based programming using the **Sensor-Switch**
- + Door sequencer: six freely programmable outputs with setup assistant
- + Channel lock when undercarriage is retracted
- + 11 channels inclusive one channel for the doorsequencer in the **Cockpit** Version
- + 12 channels in the **Competition** version
- + 8 channels in the **Professional** version
- + Signal amplification and interference suppression for all channels
- + Synchronised servo output for totally synchronous servo response
- + Variable frame rate, range 9 ms – 21 ms
- + 16-bit processor for fast, high-resolution signal processing
- + Four match-channels, each for two servos. Accurate adjustment of all eight servos
- + **Double** regulated output voltage for receivers and servos
- + Can be connected to PowerBox, Jeti, Futaba, Spektrum, HoTT and Multiplex downlink channel bus systems
- + Direct transmission of battery voltages and capacities (not **Professional**) to the transmitter
- + Separate voltage and capacity (not **Professional**) displays for each battery
- + Software-selectable servo voltage: 5.9 V or 7.4 V
- + **Minimum value memory** displays any voltage collapses
- + Large-area heat-sinks for high regulator power
- + Regulator monitor, regulator malfunction indicator
- + Support for three battery types: **LiPo/Lilon, NiMH/NiCd, LiFePo**
- + Suppresses any servo feedback currents which might develop
- + Can be updated using the **PowerBox USB Interface** or **BlueCom™ Adapter**

## 2. CONNECTIONS, CONTROLS

The following illustrations show the essential sockets and controls:

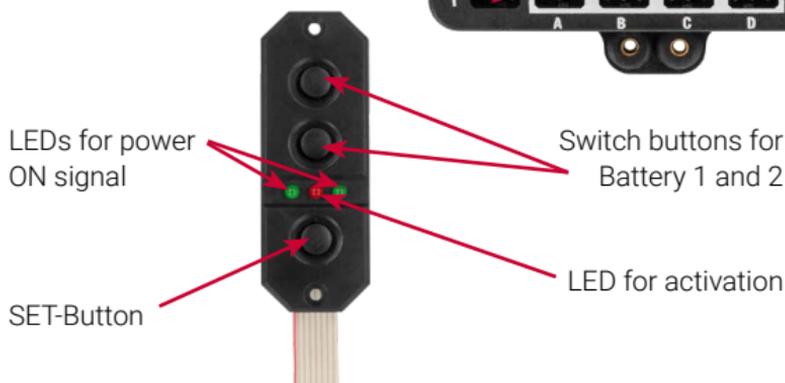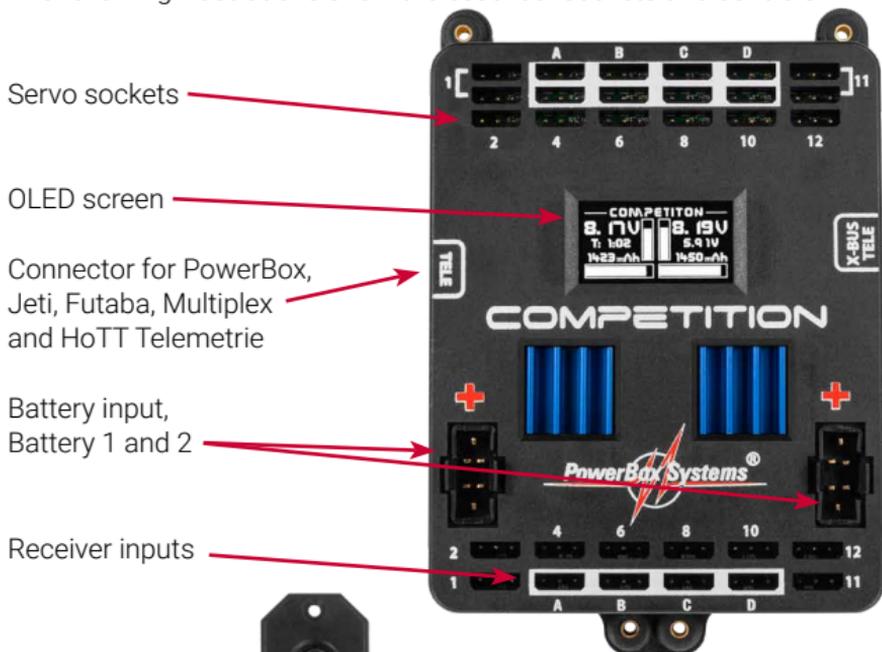

Left: socket for **Spektrum** telemetry

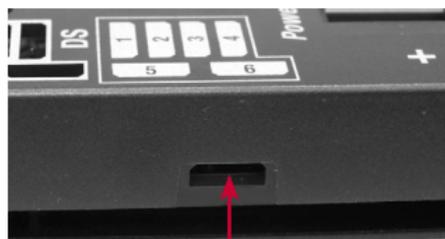

Right: **SensorSwitch** socket

### 3. FIRST STEPS, THE UNIT IN USE:

In the following instructions we do not differentiate between the **PowerBox Cockpit**, **Competition** and **Professional**, since the method of programming the three units is absolutely identical. The only difference is that the **Power-Box Cockpit** includes the door sequencer function.

#### 3.1 CONNECTIONS

Plug the batteries into the MPX connectors on the backer with correct polarity. We recommend **PowerPak 2.5 X2** or **5.0 X2**. If you prefer to use other makes of battery, or packs you have assembled yourself, please **take particular care over polarity** – it is always better to check twice rather than make a mistake. If you connect a battery to the backer incorrectly, this will immediately ruin the associated regulator. The unit does not feature reverse polarity protection, as this minimises power losses between battery and backer. The **+** markings are printed clearly on the case cover.

Connect the **SensorSwitch** to the appropriate red socket. Note that the ribbon cable must run upwards. In models subject to powerful vibration we recommend that you secure the ribbon cable at a minimum of one point in order to prevent the connector working loose and falling out. Although this would have no effect on the switched state of the backer, it would prevent you switching it off.

#### 3.2 THE PROCEDURE FOR SWITCHING ON AND OFF

The method of switching the unit on and off is very simple, and the process effectively eliminates the possibility of changing the backer's status accidentally. This is the procedure

Locate the **SET** button on the **SensorSwitch** and hold it pressed in until the central LED glows red. Now press buttons I and II in turn to switch the backer on.


Repeat the procedure to switch off: hold the SET button pressed in, wait until the central LED glows red, then confirm by pressing buttons I and II in turn.

Your **PowerBox** stores the last switched state (on or off). That means: if the backer is switched off using the **SensorSwitch**, it stays switched off.

Once switched on, the backer can only be turned off again using the switch unit. Intermittent contacts or interruptions in the power supply cannot cause the backer to be switched off.

### 3.3 MAIN SCREEN DISPLAY

When switched on, the unit's integral screen shows this display:

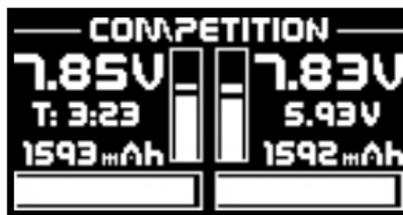

#### Key to the individual display points:

##### - Digital voltage display:

This extremely accurate display allows you to read off the voltage of the battery directly, i.e. the voltage which is present at the **input** of the **PowerBox**.

##### - Graphic voltage display:

A brief glance into the model provides you with information about the batteries' state of charge. This display is always correct for the type of battery you have selected. This means that the bar will extend right to the top of the box if the connected battery is fully charged – assuming that you have set the correct battery type. If the bar only fills the bottom third of the box, then the corresponding battery is almost flat. This indicator is supplemented by the residual capacity display.

##### - Residual battery capacity (Cockpit/Competition only):

This display shows the momentary capacity value of the battery – again, assuming that you have previously set the battery type correctly. This display is capable of providing very accurate information about the remaining battery capacity, although ageing effects or defective batteries may falsify the value. In practice this means that you should always take both values into account: if the remaining capacity appears to be high, but the voltage has already fallen to a low level, you should consider it an urgent necessity to check the battery more closely.

#### - **Graphic indicator of battery charge state:**

This display is set to match the capacity you previously entered for the batteries connected to the backer. Assuming that the battery is of good quality, this means: if the bar only reaches the half-way point, then the battery is still half-full.

#### - **Operating time:**

This figure shows the elapsed time since the last **RESET**. It is important always to carry out a **RESET** after each battery charge process.

#### - **Output voltage:**

This value displays the backer's exact output voltage. The voltage fed to the servos and receiver is the exact value displayed here.

**Note:** The residual capacity of the two batteries as displayed on the screen is likely to drift apart as the packs are discharged; this is due to minor differences in the rate of discharge of the batteries through the **PowerBox**. This by no means indicates a fault in the **PowerBox**; in fact it proves that the system features genuine redundancy. Here at **PowerBox Systems** we take great trouble to compensate for manufacturing tolerances between the two regulators, but it is never possible to produce a system which is completely devoid of tolerances. The only method of discharging two batteries at 100 % identical rates is to use a system fitted with only one regulator. However, such systems cannot be claimed to offer redundancy!

### 3.4 AFTER THE CHARGE PROCESS

The **PowerBox** must be reset after each charge process, otherwise it is impossible for the unit to display reliable values for energy consumption and operating times. The latest software release detects a charging process and resets the capacity counters automatically.

The capacity counters can be reset manually: With the system switched on, locate both buttons I and II on the **Sensor-Switch** and press them simultaneously; hold them pressed in until the following screen display appears:



## 3.5 BASIC SETTINGS

The **PowerBox Cockpit, Competition** and **Professional** feature a new kind of graphic OLED screen, intended to do away with old-fashioned programming methods based on flashing LED codes, morse code beeps or mechanical jumpers. The screen provides the basis for an extremely user-friendly control system, and eliminates the need for a supplementary setup unit or programming device. The **SensorSwitch** is employed as a convenient means of entering settings within the menu system, and since the **Sensor-Switch** is always used as the main **ON/OFF** switch, it is always installed in the model, so you cannot forget it. Wherever possible the screen provides full information in English; few abbreviations are used. The overall result is an intuitive method of programming which is a great advantage at the flying field, as you will rarely need to consult the operating instructions.

**This is the basic rule in programming:** buttons I and II are used to move the cursor or **change** values, while the **SET** button is used to select or confirm your inputs.

The breadth of functions offered by the **PowerBox Cockpit, Competition** and **Professional** is enormous, but the unit is by no means difficult to operate. To provide a clear idea of the sequence required in order to use the backer, we have drawn up a brief list of operations

- |                                      |                |
|--------------------------------------|----------------|
| 1. Battery setting                   | Point 3.6      |
| 2. Servo matching and door sequencer | Points 4 and 5 |
| 3. Telemetry settings                | Point 8        |

## 3.6 BATTERY SETTINGS

These settings should always be entered first, so that you have an accurate view of the state of the battery while you carry out further adjustments. In the screenshot below you will see the default settings of the **PowerBox Cockpit, Competition** and **Professional**. If you wish to change them, this is the procedure:

- Switch both batteries on.
- Press the **SET** button and **hold it pressed** in until the following display appears:



- Press button **II** until the **cursor (hollow circular ring)** lines up with **Power Manager**, then press the SET button. The following display now appears:



If you wish to change one of the settings, use buttons **I** and **II** to move the cursor to the appropriate menu point, then press the **SET** button to select it (cursor changes to a solid disc). You can now alter the value using buttons **I** and **II**. Once you have selected the desired value, press the **SET** button to confirm it; this saves (stores) the new value. Select the menu point **OK** to return to the main menu.

**Note:** the presence of a solid disc (instead of a ring) indicates that you are in a menu point.

It is possible to alter a value more quickly by holding one of the two buttons **I** or **II** pressed in; the value then starts to change slowly in the corresponding direction, and the rate of change accelerates with time.

Key to the individual menu points:

- **Chemistry:** this is where you set the battery type. Three different types of battery are available:

- Two-cell LiPo
- Two-cell Lilon
- Five-cell NiMH
- Two-cell LiFe

- **Capacity:** you can enter the nominal capacity of your batteries at this point.

- **Output voltage:** you can select the output voltage to 7.4 V or 5.9 V

**CAUTION:** if you intend to select the 7.4 V output voltage, please ensure **before** you make the change that **all** the consumer units connected to the unit, i.e. **all** servos, receivers and gyros, are compatible with a 7.4 V supply. Information on this subject can be found in the instructions for these components supplied by the manufacturers.

Compared with a direct, unregulated voltage of 8.4 V, the advantage of a stabilised 7.4 V supply is that the voltage is always constant. This means that the servos in your model always run at the same speed and with the same torque, regardless of the manoeuvres you fly. For example, if you were to operate the servos on the unregulated voltage of LiPo batteries, their running characteristics would alter as the freshly charged batteries steadily discharged during the flight. Another major advantage of a regulated 7.4 V voltage is that it completely eliminates damaging voltage peaks (spikes); this extends the useful life of the servos substantially.

## 4. SERVO MATCH FUNCTION

The Servo-Match function provides the facility for adjusting the centre position and end-points of the servos connected to the backer. If you have a model aircraft with more than one servo per control surface, this makes it possible to set up multiple servos to move to identical positions at identical times. Since this ensures that the servos do not work against each other, their effective life is increased, and more power is available to move the control surfaces; matched servos also draw lower current.

It is also possible to reverse the direction of rotation of individual servos. This function is useful if you wish to employ fewer channels at the transmitter. For example, the right and left elevators, or the right and left landing flaps, can be controlled using only one radio channel. In models such as jets and warbirds, which by their nature have a large number of working systems, this feature can be very important, but it can also make transmitter programming much easier with other types of model.

Select **SERVO-MATCHING** in the Main menu, and the following screen display appears:



To ensure accurate servo matching, the output to be adjusted must first be initialised. Leave the associated transmitter stick at centre. Move the cursor to **INIT OUTPUT** and press the **SET** button. Now move the transmitter stick to both end-points.

The graphic display shows the movement of the upper arrow, which indicates the input signal. The bar inside the box shows the movement of the output. The three lower arrows indicate the centre and end-point positions which are 'learned' in this process.

**Note:** if the channel has not yet been initialised, it is not possible to select the **START SERVOMATCHING** and **REVERSE SERVO** points.

The following examples illustrate the correct procedure for the Servo-Match function:

**a) Fine-tuning multiple servos to operate on a single control surface; in this case the aileron of the right-hand wing.**

- Disconnect the linkages to the - as yet unmatched - servos, to avoid them being subjected to severe forces during the adjustment procedure.
- Set up one servo (generally the inboard one – **Servo 1**) in mechanical terms, using the transmitter if necessary; continue adjusting until the centre point and the maximum end-points are exactly as required.
- Now access the Servo-Matching menu and select the servo to be matched. In our example this would be **Output B** and **Servo 2**.
- Initialise **Output B** as described above.
- Move the cursor to **START SERVOMATCHING** » but do not press the **SET** button at this stage!
- At the transmitter, move the aileron stick to the position to be adjusted, then press the **SET** button.
- You can now release the aileron stick: the **PowerBox** maintains this position. You now have both hands free, and can adjust the position accurately with one hand, using buttons **I** and **II**, whilst checking the length (matching) of the disconnected ball-link at the horn with the other hand.
- Press the **SET** button again to conclude this adjustment.
- Complete the setup procedure for the centre position and both end-points before re-connecting the servo linkage.
- If you need to carry out further adjustments to another end-point or centre position, move the aileron stick in the desired direction again, and press the **SET** button again to start the procedure.
- Repeat the procedure with all the servos connected to the same control surface.

**Note:** if your model is fitted with very large ailerons, it can be advantageous not to match the servos with 100 % accuracy. If the servos are precisely matched, gearbox play may allow aileron flutter to develop. You can eliminate this risk as follows: first match the servos exactly to each other, and then press buttons I or II two or three times to reduce the effect of lost motion in the servo gears to a controlled extent.

**b) Reversing an output when servos are installed in a “mirror-image” arrangement: in this case left and right landing flaps.**

- Disconnect the linkage to the left-hand landing flap, to avoid the servo being subjected to severe forces during the adjustment procedure.
- Connect right landing flap to **Output D, Servo 1**
- First set up the right-hand landing flap servo in mechanical terms, using the transmitter; continue adjusting until the centre point and the maximum end-points are exactly as required.
- Now access the Servo-Matching menu and select the servo to be matched (left landing flap **Output D, Servo 2**).
- Move the landing flap switch to the **centre position – not one end-point!**
- Now select: **INIT OUTPUT**
- The output is initialised by moving the switch on your transmitter to both end-points. If you have set up a delay at the transmitter, wait until the end-point has been reached.
- Use the **SET** button to select **REVERSE SERVO**. A tick appears after the function, and the left-hand landing flap servo now operates in the correct direction.
- Move the cursor to **START SERVOMATCHING** and press the **SET** button.
- Use **button I** or **II** to adjust the centre position of the left-hand landing flap to the exact position required, then press the **SET** button.
- Move the transmitter switch to the “flaps extended” position, then press the **SET** button again.
- Now set the appropriate end-point using button **I** or **II** before concluding the procedure with the **SET** button.
- Move the transmitter switch to the “retracted” position, then press the **SET** button again.
- Now set the corresponding end-point with button **I** or **II**, and conclude the procedure by pressing the **SET** button.
- Both landing flaps will now move synchronously.

## 5. SETTING UP THE DOOR SEQUENCER

Select the **SEQUENCER** point at the main menu; this takes you to the following screen display:



The **SETUP ASSISTANT** is a function in the **Cockpit** which has been included since software version V15; it makes the task of programming the actual door sequencer function considerably easier.

The **EXPERT MENU** provides a very powerful programming interface, with which you can program highly individual sequences, or alternatively expand the settings previously entered using the **SETUP ASSISTANT**.

The **SETUP ASSISTANT** describes the **TASKs** in the actual door sequencer in accordance with the data you enter. The Assistant guides you through the settings: everything you need to do is described on the screen. These printed instructions simply provide additional information which cannot be displayed on the **PowerBox** screen due to size limitations.

The recommended programming procedure is as follows: first enter the basic settings using the **SETUP ASSISTANT**. At this point the system setup will be complete for 95 % of all models. If you wish to add more wheel doors or adjust the sequence to cater for other details, this can be carried out in the **EXPERT MENUE**.

Select the **SETUP ASSISTANT** in the menu; this takes you to the following screen display:



Operate the appropriate transmitter switch, and the **PowerBox** automatically detects it as the switch which you have assigned to the retract system. The on-screen arrows should now be located in front of **UP/DOWN**. If you find

that your retract switch works in the wrong "sense" (direction), correct it by reversing that output at the transmitter.

Press the **SET** button again to leave this function, and move the cursor to **OK**.

The door sequencer's method of working is determined in the following menu:



The following sequences are available:



### **Mode 1:**

#### **Extend undercarriage:**

Open wheel doors → extend undercarriage

#### **Retract undercarriage:**

Retract undercarriage → close wheel doors

### **Mode 2:**

#### **Extend undercarriage:**

Open nosewheel doors → extend nosewheel

Open main wheel doors → extend main undercarriage → close main wheel doors

#### **Retract undercarriage:**

Retract nosewheel → Close nosewheel doors

Open main wheel doors → retract main undercarriage → close main wheel doors

### **Mode 3:**


#### **Extend undercarriage:**

Open nosewheel doors → extend nosewheel → close nosewheel doors  
Open main wheel doors → extend main undercarriage → close main wheel doors

#### **Retract undercarriage:**

Open nosewheel doors → retract nosewheel → close nosewheel doors  
Open main wheel doors → retract main undercarriage → close main wheel doors

Move the cursor to the appropriate mode, and press the **SET** button to confirm your choice. Select **OK** to move on to the next screen display:

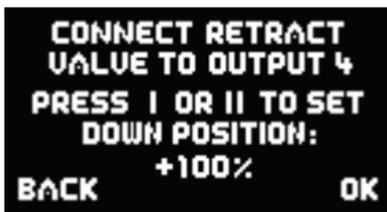

Connect your retract system valve to output **4**. One of the following will now occur, depending on the way your valve is programmed:

**Valve is triggered**, and the undercarriage retracts. Press button **II** on your **SensorSwitch**, and hold it pressed in until the undercarriage extends again.

**Valve is not triggered**, and the undercarriage remains in the extended state.

Press the **SET** button twice to move to the next screen display:



The undercarriage should now retract. If not, hold button **I** pressed in until the valve is triggered, and the undercarriage retracts. Press the **SET** button to move on to the next stage of the procedure.

Connect the nosewheel door servo to output **1**. Press the **SET** button to close the nosewheel door; repeat the procedure in the next setup screen to open the door.

**CONNECT RETRACT  
VALUE TO OUTPUT 4  
PRESS I OR II TO SET  
UP POSITION:  
+100 %  
BACK OK**

The succeeding steps are used to set up the second front wheel door and the rear wheel doors; the procedure is identical to that described for the nosewheel door. The servo for the right-hand wheel door is connected to output **2**, that for the left-hand wheel door to output **3**.

**CONNECT FRONT DOOR  
TO OUTPUT 1  
PRESS I OR II TO SET  
CLOSED POSITION:  
+100 %  
BACK OK**

**CONNECT FRONT DOOR  
TO OUTPUT 1  
PRESS I OR II TO SET  
OPENED POSITION:  
+100 %  
BACK OK**

**CONNECT RIGHT DOOR  
TO OUTPUT 2  
PRESS I OR II TO SET  
CLOSED POSITION:  
+100 %  
BACK OK**

**CONNECT RIGHT DOOR  
TO OUTPUT 2  
PRESS I OR II TO SET  
OPENED POSITION:  
+100 %  
BACK OK**

**CONNECT LEFT DOOR  
TO OUTPUT 3  
PRESS I OR II TO SET  
CLOSED POSITION:  
+100 %  
BACK OK**

**CONNECT LEFT DOOR  
TO OUTPUT 3  
PRESS I OR II TO SET  
OPENED POSITION:  
+100 %  
BACK OK**

**Note:** if you are only using one valve for all the wheel doors, you can bypass the last five points by selecting **OK**.

All the settings are now complete, and you will see one final safety query:



Move your transmitter switch to the "gear down" position. It will now take a few moments for the Assistant to create the necessary tasks, and move the doors to the correct position without any fouling or jamming.

If the timing (pauses, opening times and closing times) is not exactly as you wish, you can change the settings manually at any time.

Select the **EXPERT MENUE** point in the **DOORSEQUENCER** menu and you will see this screen display:



In the Expert Menue, the sequencer does not constrain you to use pre-set modes, forcing you to adopt fixed, pre-determined vectors for retracting and extending the undercarriage.

The **PowerBox** door sequencer offers innumerable options, because the modeller has the freedom to define each step in terms of travel, sequence and timing. For example, all the wheel doors can be set to open or close at entirely different speeds. It is also possible to set up multiple forward-and-back sequences. If the full-size aircraft features a "jerk" when the legs lock, that can also be simulated. The opening and closing processes can be set up entirely individually and independently of one another.

In spite of the vast scope of these facilities, the sequencer is simple and user-friendly to set up, as the screen and menu system guide you through the procedure. The sequencer software also features supplementary programming aids. Once you understand the principle, the system can easily be programmed without recourse to the manual.

We always recommend that you start the setup procedure using the **Setup ASSISTANT**. This incremental setup aid creates the tasks required, automatically detects the retract switch channel, and assigns the transmitter channel for the gear switch. If you use the Assistant, but find it necessary or desirable to alter the settings subsequently – perhaps to fine-tune the timing – then this can be carried out using the menu points outlined below. To help you arrive quickly at a satisfactory result, the following section lists the door sequencer functions in detail:

The primary component of the procedure is the **TASK**, which is self-explanatory: a task refers to the movement of a servo from its starting point to its stop point with a defined start and stop time. Twelve tasks are available for the retraction process, and a further twelve for extension. In total 24 different movement sequences can be programmed.

A **TASK** contains the following information:

<b>Value</b>	<b>Range</b>
Task number	1 – 12
Extend or retract undercarriage	UP » DOWN / DOWN » UP
Servo number	1 – 6
Servo START position	<b>700 µs – 2300 µs</b>
Servo STOP position	<b>700 µs – 2300 µs</b>
Start time	0 – 25.0 s
Stop time	0 – 25.0 s

## Intelligent programming aid:

If you wish to set up multiple tasks in order to move the wheel doors to several positions, it should be obvious that the new task's initial positional value and start time are determined by the previous position and time for the servo concerned. This is carried out automatically, helping to speed up the programming procedure, and eliminates the need for you to note down the servo's previous position and stop time.

A similar situation applies when you set the retract process **DOWN » UP**. When you set up the extend process **UP » DOWN**, the positional values for Start and Stop for that servo are already entered as Stop and Start.

The following example demonstrates how one wheel door opens half-way when the transmitter switch is operated, pauses for a while, then runs to its end-point. When the switch is reversed, the door returns to its original position in a single movement lasting three seconds.

```
○ ACTION: UP ⇒ DOWN
TASK: 1     SERVO: 3
START-POS: 1100 µs
STOP-POS:  1500 µs
STARTTIME: 1.0 s
STOPTIME:  4.0 s OK
```

**UP » DOWN** means undercarriage extension. Output 3 of the door sequencer has been selected. The servo runs from its initial value of 1100 µs (right servo end-point) to the stop value of 1500 µs (servo centre). The servo only starts moving 1.0 seconds after the switch is operated, and the period

is 3.0 seconds (4.0 s – 1.0 s).

Task 1 has now completed its course.

```
○ ACTION: UP ⇒ DOWN
TASK: 2     SERVO: 3
START-POS: 1500 µs
STOP-POS:  1800 µs
STARTTIME: 6.0 s
STOPTIME:  8.0 s OK
```

After a pause lasting 2.0 seconds at servo centre, the servo starts moving in the direction of 1800 µs (left servo end-point). The movement period is 2.0 seconds (8.0 s – 6.0 s).

Task 2 has completed its course.

```
○ ACTION: DOWN ⇒ UP
TASK: 1     SERVO: 3
START-POS: 1800 µs
STOP-POS:  1100 µs
STARTTIME: 0.0 s
STOPTIME:  3.0 s OK
```

**DOWN » UP** means undercarriage retraction. In this example, when the switch is operated, the servo immediately starts running slowly from the left to the right servo end-point (Start time 0.0 s).

The positional values vary according to your linkages, and must be adjusted to suit your individual model. Clearly it is important to avoid your wheel doors jamming (striking their mechanical end-stops). The timing values shown here should also be set to suit your requirements. The task numbering does not need to coincide with the timed sequence; for example, **Task 5** could be set to run before **Task 2**.

Our example clearly shows how the function is built up. Additional movements or intermediate stops when the doors open or close can be added at any time; all you need is to set up a new free task. Viewed overall, there is now no reason at all why the retraction and extension of the undercarriage in the model should not exactly emulate that of the full-size aircraft. In other words: you can give free rein to your imagination.

**Note:** if you wish simply to switch servos or valves on or off, you must always enter a time difference in the sequence, as the door sequencer needs a small amount of time to carry out its calculations. The following is an example for a retract valve:

```
○ ACTION: DOWN ⇒ UP
TASK: 1     SERVO: 1
START-POS: 1900 μs
STOP-POS:  1100 μs
STARTTIME: 0.0 s
STOPTIME:  0.1 s OK
```

```
○ ACTION: UP ⇒ DOWN
TASK: 1     SERVO: 1
START-POS: 1100 μs
STOP-POS:  1900 μs
STARTTIME: 0.0 s
STOPTIME:  0.1 s OK
```

The time lag of 0.1 s is sufficient, and is virtually unnoticeable in practice.

**Important:** the first **START POSITION** at **UP » DOWN** must always coincide exactly with the last **STOP POSITION** of **DOWN » UP**. This simply means that the last task must cause the servo to return to its starting value, regardless of any individual intermediate steps you create! If the wheel door servos carry out unusual or unexpected movements when you try out the programmed sequence, please check your tasks!

## 6. CHANNEL LOCK WHEN UNDERCARRIAGE IS RETRACTED

The **PowerBox Cockpit's door sequencer** also features one last unique function: it is now possible to switch a channel off when the undercarriage is retracted. The purpose of this feature is to prevent the retracted nosewheel moving inside the fuselage when the pilot gives a rudder command, as this may cause the mechanical system to jam. The function can be found under **GEAR UP – OUTPUT OFF** in the Door Sequencer menu. Simply use the **SensorSwitch** to select the output which you wish to disable when the undercarriage is retracted. Select the output, and confirm your choice with the **SET** button; at the same time the system stores the position of the nosewheel servo at which it is to remain.

**CAUTION:** This function is extremely useful, but it also creates a danger: if you accidentally include a control channel (e.g. elevator) in your programming, the control channel will then be switched off when you retract the undercarriage after the model takes off. This will usually result in loss of the model!

## 7. FRAME RATE:

### What does 'frame rate' mean?

This value indicates the time interval at which the servo signal is refreshed. Modern digital servos are unlikely to encounter problems with the 12 ms setting, but older analogue servos may require a longer setting of 21 ms. For more information on servo compatibility please contact the manufacturer of your servos. A faster refresh rate causes the servos to respond more swiftly, and they will offer greater effective torque because they are capable of counteracting the forces acting upon them more quickly.

**CAUTION:** The Frame-Rate setting should only be changed if you are certain that your servos are designed for the Frame-Rate you wish to use. In the extreme case please note that the servo may lose its triggering, and become "soft".

## 8. TELEMETRY

The **PowerBox Cockpit, Competition** and **Professional** makes battery data available as telemetry information which can be exploited by various makes of radio control system. The unit supports the following makes of equipment, and other systems will gradually be introduced as updates become available:



### - PowerBox CORE P<sup>2</sup>BUS

Connect the **PowerBox** telemetry output to the receiver's P<sup>2</sup>BUS input using a standard commercial Uni patch-lead. The voltage and residual capacity data are now available at the transmitter.

### - Jeti

Connect the **PowerBox** telemetry output to the receiver's EXT input using a standard commercial Uni patch-lead. The voltage and residual capacity data are now available at the transmitter.

### - Futaba

Connect the **PowerBox** telemetry output to the receiver's sensor input using the Teleconverter (Order No. 5600). The voltage and residual capacity of both batteries are now available at the transmitter.

### - Multiplex MSB

Connect the **PowerBox** telemetry output to the receiver's sensor input using a standard commercial Uni patch-lead. The voltage and residual capacity of both batteries are now available at the transmitter.

### - Spektrum

Connect the four-pin Spektrum Telemetry output to the TM1000, and at the same time bind the TM1000 and the connected satellites to the transmitter. Activate the **PowerBox** Telemetry display at your transmitter. The voltage and residual capacity of both batteries are now available at the transmitter. The matching X-Bus lead for this can be obtained in various lengths from Horizon Hobby:

SPMA9579	X-Bus extension 150 mm
SPMA9580	X-Bus extension 300 mm
SPMA9581	X-Bus extension 600 mm

## - HoTT

Connect the backer's telemetry output to the receiver's Sensor input using a standard commercial Uni patch-lead. Select the "**Electric Air Module**" in your transmitter's telemetry menu. The voltage of both batteries, and the residual capacity of the weaker battery, can now be viewed on the transmitter's screen.

## 9. RESET, UPDATE, SAVE AND RESTORE

The **PowerBox Cockpit, Competition** and **Professional** offers numerous facilities for resetting individual ranges without affecting other settings. For example, it is possible to reset **Door Sequencer** without affecting the **Servo Matching** settings.

All the Reset options can be found in the **RESET/UPDATE** menu:



In the interests of safety, the software generates a confirmation query when you select one of the Reset options; the intention is to avoid accidental erasure of data. If you confirm this query, the settings are permanently erased, and cannot be restored.

The **PC-CONTROL** option permits the **Competition/Cockpit/Professional** to be connected to a PC, a tablet or a mobile telephone. In this way you can load updates into the **PowerBox** to ensure that it constantly reflects the latest state of development. The following methods are available:

- a) Using the **BlueCom™ Adapter** (iOS: 9021, Android: 9022), a mobile telephone and the free **PowerBox** Mobile Terminal App. You will find the Mobile Terminal App in your App Store.
- b) Using the **USB Interface Adapter** (9020), a PC and the **PowerBox** Terminal program. The **PowerBox** Terminal software is available as a free download from our website.

## 10. REGULATOR ERROR MESSAGE

The **PowerBox Cockpit**, **Competition** and **Professional** constantly checks both voltage regulators independently of each other. If a fault should occur in one of these regulators, this warning will appear on the screen:



There are three possible causes for this warning:

- One or both regulators is generating insufficient output voltage or none at all. This could mean that you are flying with only one regulator functioning, and for reasons of safety this is not permissible.
- One or both regulators is not functioning, and is passing through the full battery voltage. This means that the servos and receiver are being operated on an excessive voltage, which could lead to failures in the longer term. This malfunction usually occurs after a reversed polarity connection.
- One battery is plugged in but not switched on. The second battery is plugged in and switched on. The screen displays the message **REGULATOR MALFUNCTION**. This **does not indicate a fault!** The message is a warning, and is intended to remind the user to switch on both regulator circuits.

In the first two cases please send the device to our Service Department at the address below, with the completed repair form which you can download from our website.

### SERVICE ADDRESS

#### PowerBox-Systems GmbH

Ludwig-Auer-Straße 5  
D-86609 Donauwoerth  
Germany

## 11. SPECIFICATION






Operating voltage:	4.0 Volt to 9.0 Volt
Power supply:	2 x two-cell LiPo/Lilon battery, 7.4 Volt 2 x five-cell NiCd / NiMH batteries, 2 x two-cell LiFePo batteries (A123)
Current drain:	switched on – approx. 125 mA switched off – approx. 33 $\mu$ A
Dropout voltage:	approx. 0.25 V
Max. receiver and servo current:	2 x 10 A (stabilised) according to cooling Peak 2 x 20 A
Servo signal resolution:	0.5 $\mu$ s
Signal repeat rate: (frame rate)	9 ms, 12 ms, 15 ms, 18 ms, 21 ms
Screen:	OLED 128 x 64 pixels, graphic
Servo sockets:	<b>Professional:</b> 12 sockets, 8 channels <b>Competition:</b> 18 sockets, 12 channels <b>Cockpit:</b> 21 sockets, 11 channels
Temperature range:	-30 °C to +75 °C
Weight:	115 g
SensorSwitch:	15 g
EMV approval:	EN 55014-1:2006
CE approval:	2004/108/EG
WEEE Reg. No.:	DE 639 766 11

**This battery backer fulfils the EMV protective requirements, EN 55014-1:2006 with certificate dated 10 February 2009. EMC approval 2004/108/EG.**

### **The unit must not be connected to a mains PSU!**

The **PowerBox Cockpit, Competition** and **Professional** is intended exclusively for use in modelling applications. It is prohibited to use it for any purpose other than in radio-controlled models.

## 12. DIMENSIONS

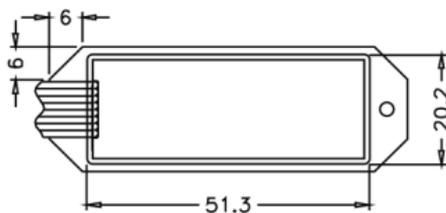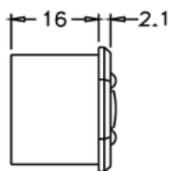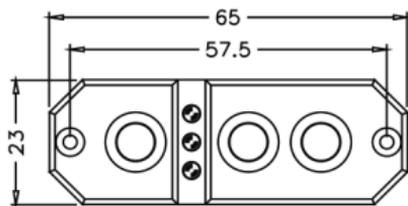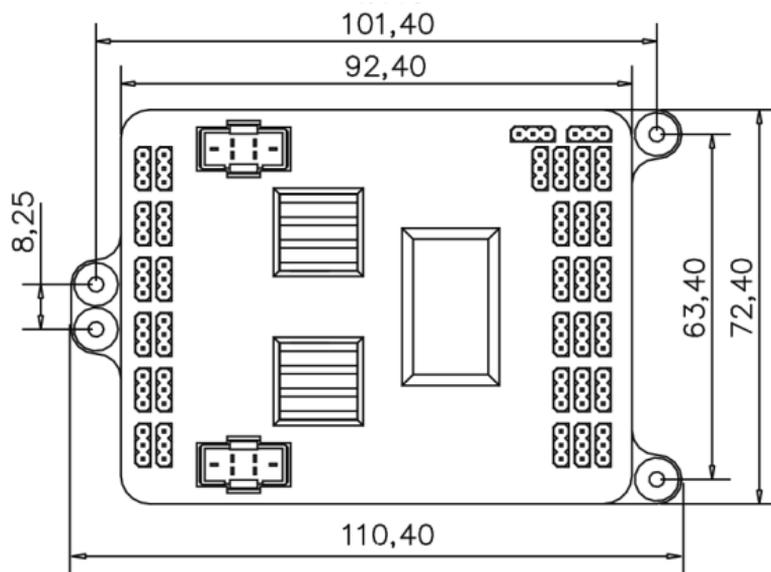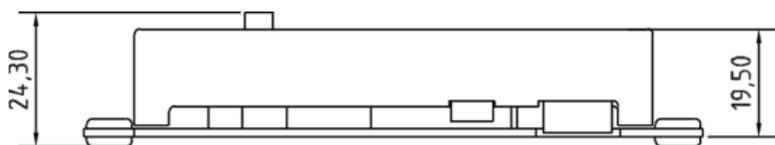

## 13. SET CONTENTS

- PowerBox Cockpit / Competition / Professional
- 8, 11 or 12 patch-leads
- SensorSwitch
- 4 rubber grommets and brass spacer sleeves, factory-fitted
- 4 retaining screws
- Operating instructions

## 14. SERVICE NOTE

We are anxious to offer good service to our customers, and to this end we have set up a Support Forum which deals with all queries concerning our products. This relieves us of a great deal of work, as it eliminates the need to answer frequently asked questions time and again. At the same it gives you the opportunity to obtain help quickly all round the clock – even at weekends. All the answers are provided by the **PowerBox Team**, guaranteeing that the information is correct.

Please use the Support Forum **before** you telephone us.

You can find the forum at the following address:

**[www.forum.powerbox-systems.com](http://www.forum.powerbox-systems.com)**

## 15. GUARANTEE CONDITIONS

At **PowerBox-Systems** we insist on the highest possible quality standards in the development and manufacture of our products. They are guaranteed **“Made in Germany”!**

That is why we are able to grant a **24 month guarantee** on our products from the initial date of purchase. The guarantee covers proven material faults, which will be corrected by us at no charge to you. As a precautionary measure, we are obliged to point out that we reserve the right to replace the unit if we deem the repair to be economically unviable.

Repairs which our Service department carries out for you do not extend the original guarantee period.

The guarantee does not cover damage caused by incorrect usage, e.g. reverse polarity, excessive vibration, excessive voltage, damp, fuel, and short-circuits. The same applies to defects due to severe wear.

We accept no liability for transit damage or loss of your shipment. If you wish to make a claim under guarantee, please send the device to the following address, together with proof of purchase and a description of the defect:

### **SERVICE ADDRESS**

**PowerBox-Systems GmbH**  
Ludwig-Auer-Straße 5  
D-86609 Donauwoerth  
Germany

## **16. LIABILITY EXCLUSION**

We are not in a position to ensure that you observe our instructions regarding installation of this battery backer, fulfil the recommended conditions when using the unit, or maintain the entire radio control system competently.

For this reason we deny liability for loss, damage or costs which arise due to the use or operation of the device, or which are connected with such use in any way. Regardless of the legal arguments employed, our obligation to pay compensation is limited to the invoice total of our products which were involved in the event, insofar as this is deemed legally permissible.

We wish you every success using your new power supply from **PowerBox-Systems!**



Donauwoerth, January 2021

## **PowerBox-Systems GmbH**

Ludwig-Auer-Straße 5  
D-86609 Donauwoerth  
Germany



+49-906-99 99 9-200



+49-906-99 99 9-209

**[www.powerbox-systems.com](http://www.powerbox-systems.com)**